
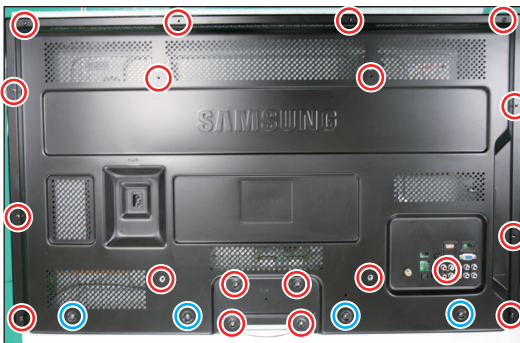



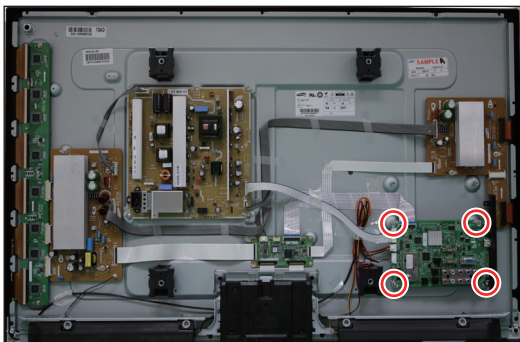

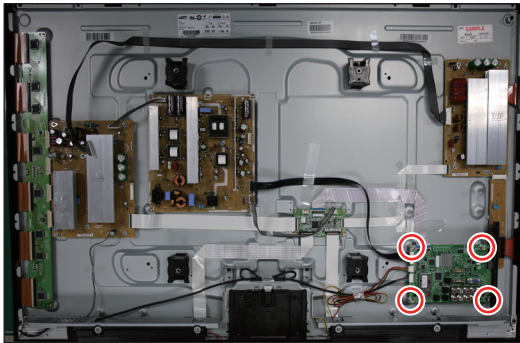



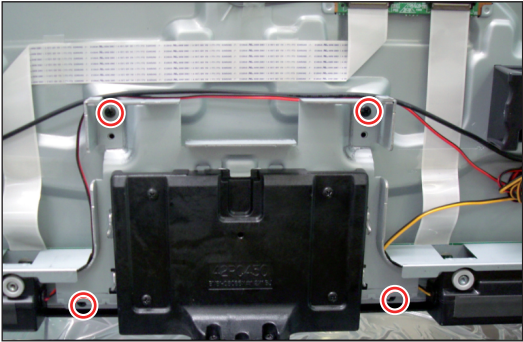

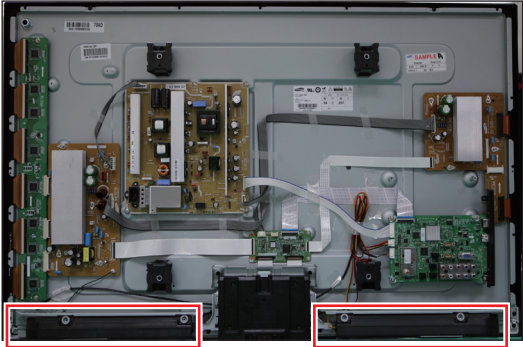
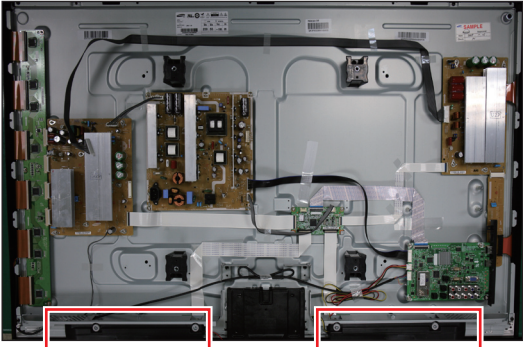
3. Disassembly & Reassembly

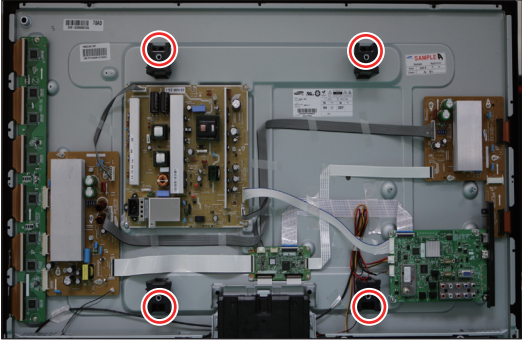
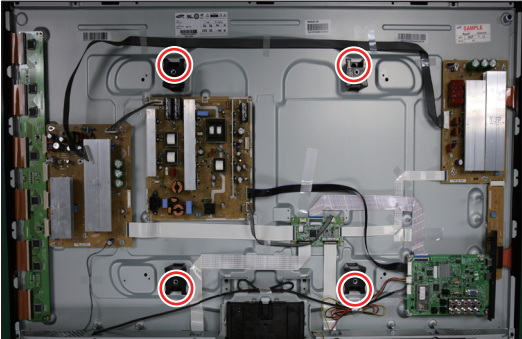


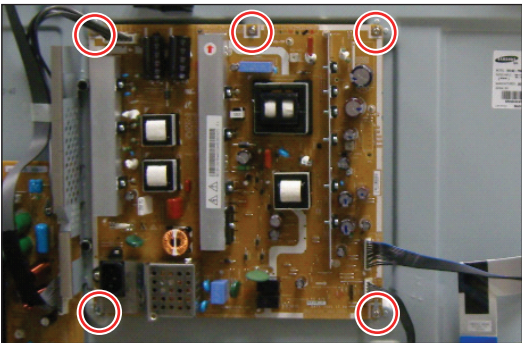

3-1 Overall Disassembly & Reassembly

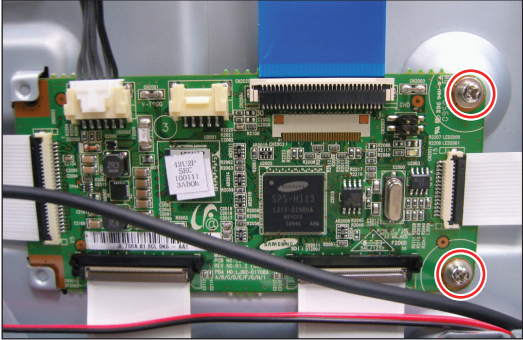

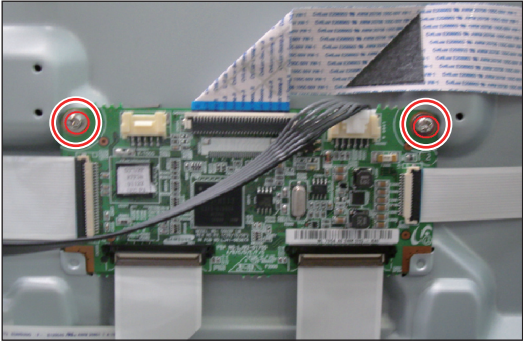

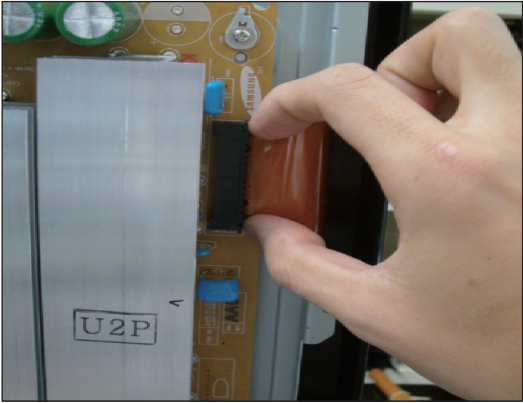
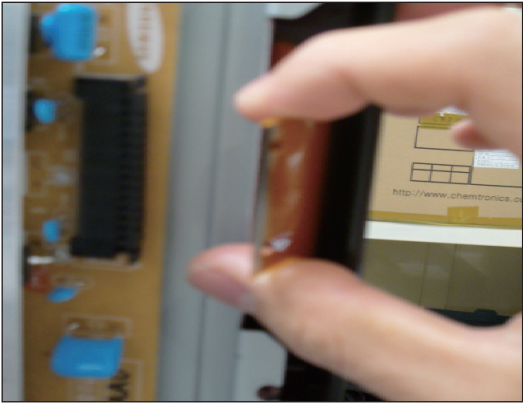



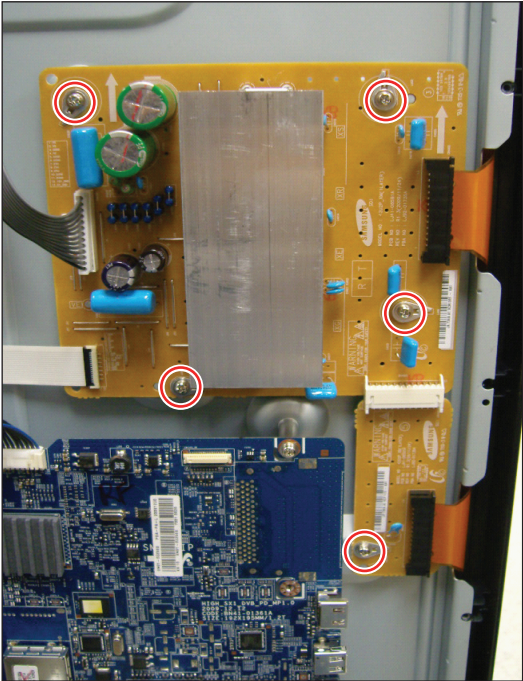

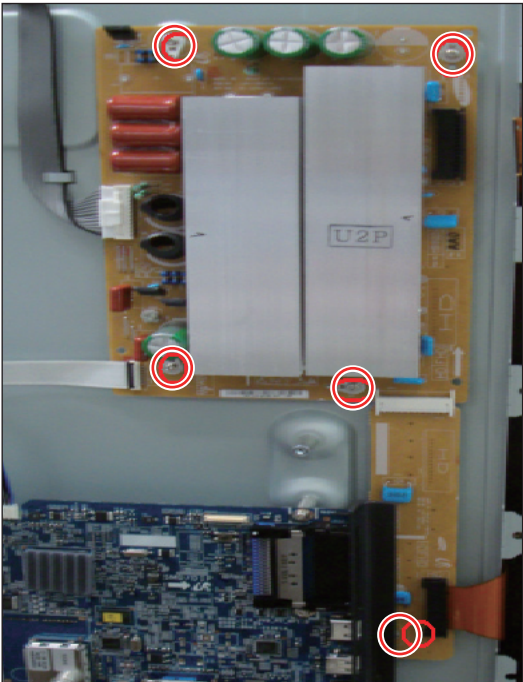
- Be sure to separate the power cord before disassembling the unit.
- Discharge the capacitors first when separating PCB's with high capacity capacitors such as SMPS, X Main Board, Y Main Board, etc. (A spark may be generated by the electric charge, and there is danger of electronic shock.)
- Check that the cables are properly connected referring to the circuit diagram when disassembling or assembling the unit taking care not to damage the cables.
- Take care not to scratch the Glass Filter in the front.
- Assemble the boards in the reverse order of the disassembly.
- The plasma must be be layed down on a flat padded surface for disassembly and reassembly.

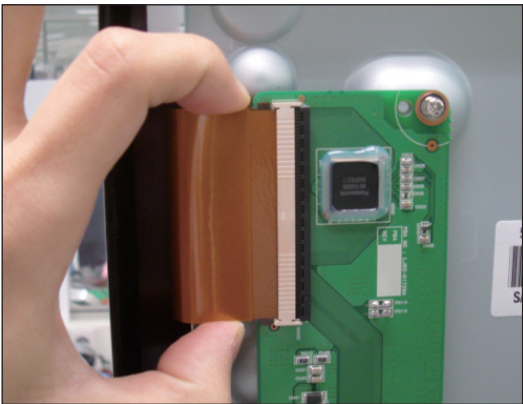
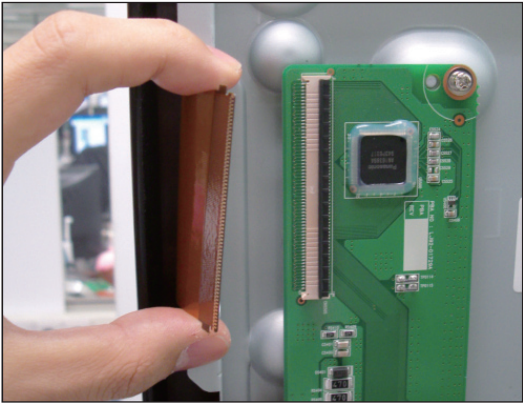
| Description | Description Photo |
|--|--|
| 1. Remove 19 screws. () : BH,+,B,M4,L12,ZPC(BLK),SWRCH18 * L : Screw Length(mm) |   6003-001003 |
| 2. Remove 4 screws. () : BH,+,S,M4,L10,ZPC(BLK),SWRCH18 * L : Screw Length(mm) |  6003-000337 |
| 3. Remove the Cover Rear. | |
| 4. Detach all connectors from the Main Board. 5. Remove 4 screws. : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm) |   6001-001921 |
| 6. Remove the Main Board. |   6001-001921 |


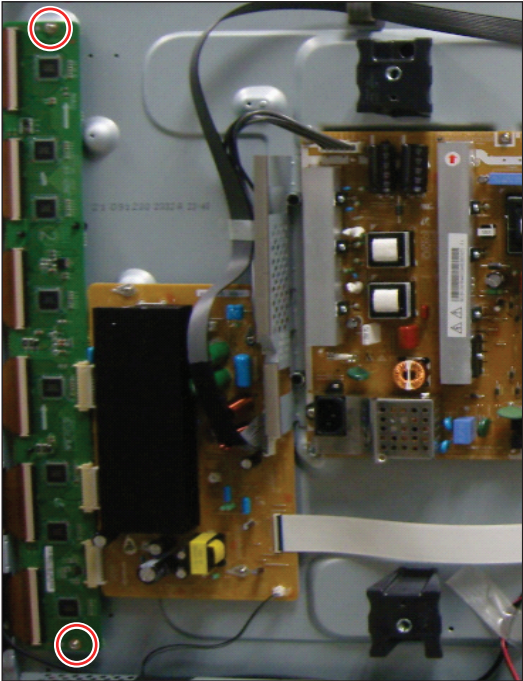

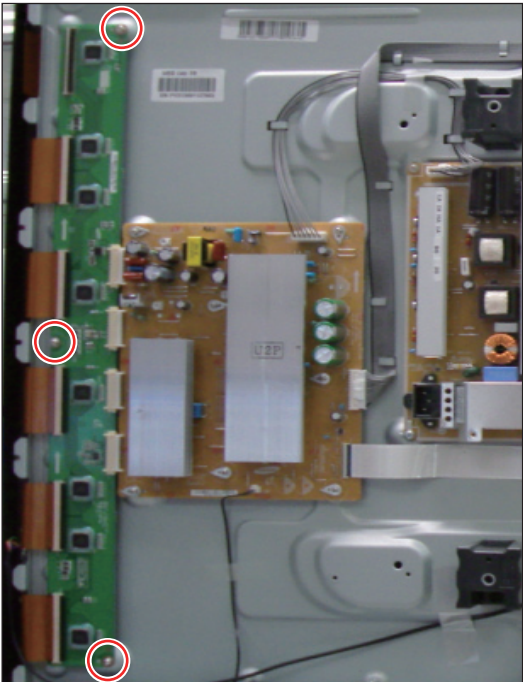
| Description | Description Photo |
|--|--|
| <div>7. Remove 4 screws. : BH,+,B,M4,L12,ZPC(BLK),SWRCH18 * L : Screw Length(mm)</div> <div>8. Remove the BRACKET-SUPPORT STAND.</div> | <div></div> <div></div> <div>6003-001003</div> |
| <div>9. Remove P-SPEAKER. (No screw for holding)</div> | <div></div> <div><42" PDP></div> <div></div> <div><50" PDP></div> |


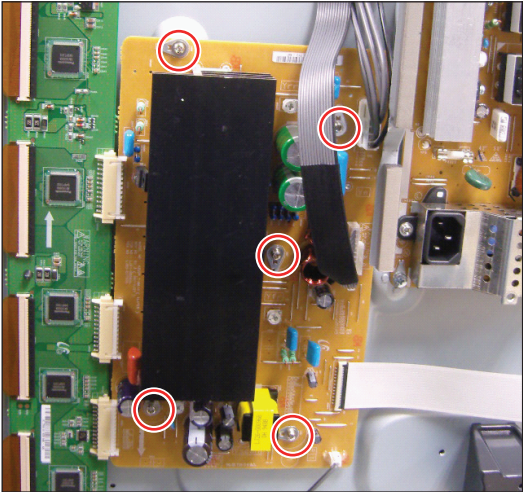

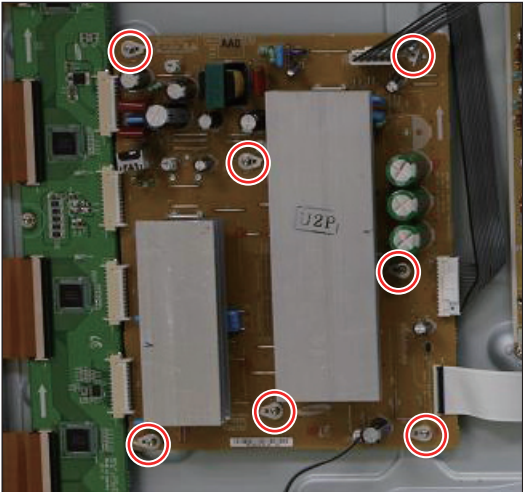
| Description | Description Photo |
|---|--|
| <p>10. Remove 4 screws. : BH,+,S,M4,L10,ZPC(BLK),SWRCH18 * L : Screw Length(mm)</p> <p>11. Remove Holder Module.</p> <p>⚠ Please lay the PDP panel face down on a soft surface when separating front cover.</p> |  <p style="text-align: center;"><42" PDP></p>  <p style="text-align: center;"><50" PDP></p>  <p style="text-align: right;">6003-000337</p>  <p style="text-align: right;">6003-000337</p> |
| <p>12. Detach all connectors from the SMPS.</p> <p>13. Remove 5 screws. : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm)</p> <p>14. Remove the SMPS.</p> <p>⚠ Wear gloves when handling the power board as there may be some remaining electrical charge in the capacitor. Specifically, avoid touching any part of the capacitor.</p> |   <p style="text-align: right;">6001-001921</p> |

| Description | Description Photo |
|---|---|
| <p>15. Detach all connectors from the Logic Board.</p> <p>16. Remove 2 screws. : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm)</p> <p>17. Remove the Logic Board.</p> | <div data-bbox="726 320 1251 658">  </div> <p data-bbox="922 678 1054 707"><42" PDP></p> <div data-bbox="1305 443 1406 539">  </div> <p data-bbox="1281 562 1430 591">6001-001921</p> <div data-bbox="726 757 1251 1097">  </div> <p data-bbox="922 1117 1054 1146"><50" PDP></p> <div data-bbox="1305 882 1406 978">  </div> <p data-bbox="1281 1001 1430 1030">6001-001921</p> |
| <p>18. Detach all Connectors from the X-Main Board.</p> <p>※ To separate the Flat Cable of the X-Main Board, press the upper and the lower sides of the connector.</p> | <div data-bbox="726 1196 1251 1597">  </div> <div data-bbox="726 1648 1251 2049">  </div> |

| Description | Description Photo |
|---|---|
| <p>19. Remove 5 screws. : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm)</p> <p>20. Remove the X-Main Board with X-Buffer Board.</p> | <div><p>6001-001921</p></div> <p><42" PDP></p> |
| | <div><p>6001-001921</p></div> <p><50" PDP></p> |

| Description | Description Photo |
|---|---|
| <p data-bbox="172 315 675 425">21. Detach the scan board connectors from the panel by pulling the holder from both the top and bottom ends.</p> | <div data-bbox="726 315 1251 716"></div> <div data-bbox="726 770 1251 1171"></div> |

| Description | Description Photo |
|--|---|
| <p>22. Remove 2 screws. (42" PDP) Remove 3 screws. (50" PDP) : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm)</p> <p>23. Remove the Y-Buffer Board.</p> | <div><p>6001-001921</p></div> <p><42" PDP></p> <div><p>6001-001921</p></div> <p><50" PDP></p> |

| Description | Description Photo |
|--|--|
| <p>24. Detach all connectors from the Y-Main Board.</p> <p>25. Remove 5 screws. (42" PDP) Remove 7 screws. (50" PDP) : PH,+,WSP,M3,L8,NI PLT,SWRCH18A * L : Screw Length(mm)</p> <p>26. Remove the Y-Main Board.</p> | <div><p>6001-001921</p><p><42" PDP></p></div> <div><p>6001-001921</p><p><50" PDP></p></div> |